


4) If the pitch needs adjusting, loosen slotted screws in block "C" and install the provided shims between block "C" and the soundbar. To tilt soundbar forward, place shims above the slotted screws or below to tilt backward.

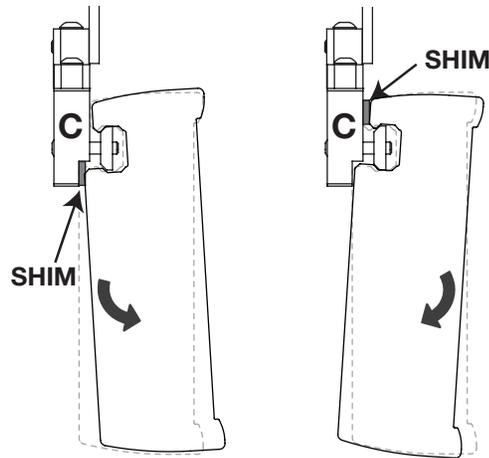

SoundVision Technologies dba TRUAUDIO

SPEAKER PRODUCT WARRANTY

All in-ceiling, in-wall, in-room speakers and volume controls have a limited lifetime warranty. This warranty includes lifetime parts and repair labor on all components. The warranty extends only to the original purchaser of the product and not to any subsequent owner. TRUAUDIO's obligation under these warranties is limited to repairing or replacing any component found defective in material or workmanship under normal conditions of use with an equal and/or current product. These warranties shall not apply to products which have been abused, modified, or disassembled. Products to be repaired or returned under this warranty must be returned to the factory through an authorized TruAudio dealer with all transportation and insurance charges prepaid.


It is the policy of TRUAUDIO to continuously incorporate improvements into our products. All specifications are subject to change without notice. If you have any questions regarding this or any other TRUAUDIO products, please visit www.TruAudio.com or contact us:

Office: 1-888-858-1555, Monday-Friday 7 am - 6 pm MST
Email: CustomerService@truaudio.com

TruAudio
198 N. Old Highway 91
Hurricane, UT 84737 USA


CONTENTS

- (2) Swivel Brackets (Left, Right)
- (2) Short Vertical Bar
- (2) Long Vertical Bar
- (4) Flat Head Mounting Screw
- (4) Rectangular Shims
- (1) 3mm Hex Key

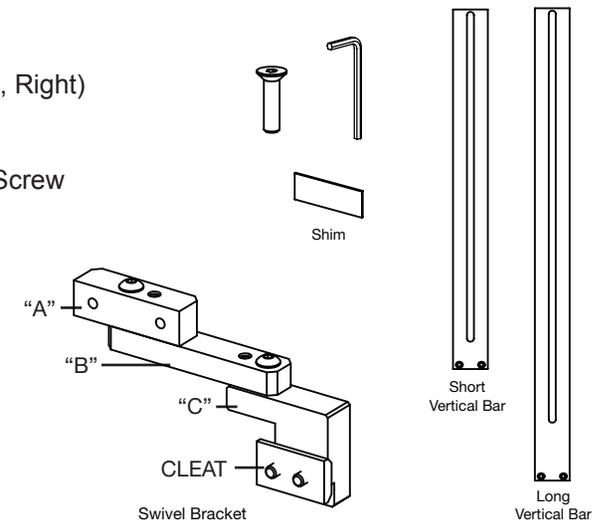


INSTALLATION


1) Carefully lay the TV face down on a non-marring surface. Position the custom length soundbar face down, with the grill attached, along the desired edge of the TV. This will help ensure that the final mounted position of the soundbar is flush/even with the TV.

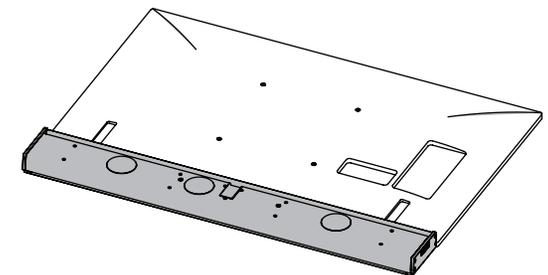

2) To determine which Vertical Bars to use, place a bar even with the edge of the TV where the soundbar will be mounted. The slot in the bar should cover both VESA holes, but not extend beyond the TV.

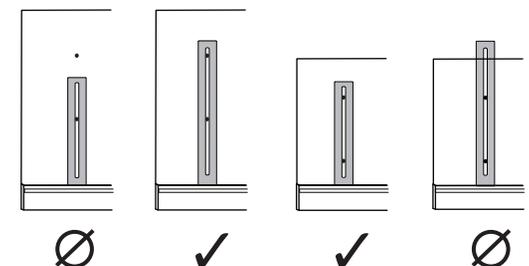


3) Attach the swivel bracket to the selected vertical bars using the included flat head screws. The beveled edges of block "A" should face away from the vertical bar.

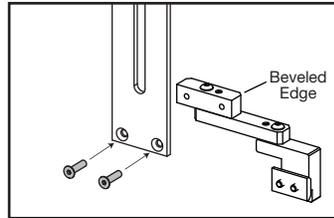


4) If the TV has any protruding logos or controls that do not allow the soundbar to fit closely to the TV you can use the foam strip included with your soundbar to block any light leakage. For best results attach the foam strip directly to the soundbar, just behind the protrusion.


5) For TV's that are thicker than the soundbar itself, it may be necessary to reconfigure the swivel brackets to the underside of the arm on block C. This will make it easier to keep the soundbar close to the TV and still allow you to tighten the necessary screws. When reconfiguring the bracket remember to also install the set screw from the underside of the arm.

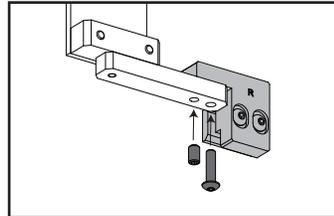

6) Install the right and left swivel brackets onto the soundbar. Loosen the screws in block "C" so that the ends are flush with the cleat. Insert the cleat at an angle into the channel, beginning at the center of the soundbar, and slide to the appropriate side. Repeat with the other side.

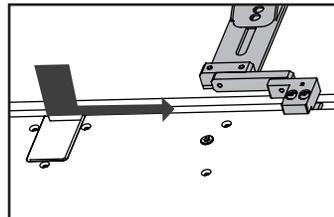


7) Align the soundbar to the TV. Place the Vertical Bar over the VESA mounting holes in the TV. The swivel bracket assemblies should be oriented outwards. Lay the TV mount over the top of the Vertical Bars and thread (but do not tighten) the TV mount hardware into place.

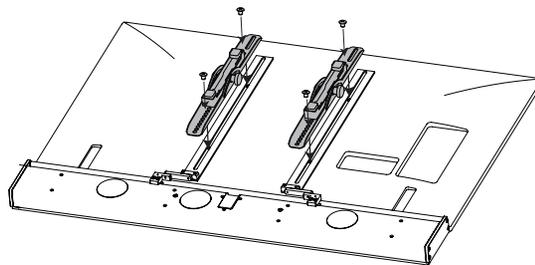

8) Loosely tighten the mount hardware. Begin with the screws closest to the soundbar and work towards the TV mount. Keep the screw heads centered in their slots in block "C" for now.


9) Make any final adjustments to the position of the soundbar relative to the TV and tighten the hardware (including setscrews), starting at the soundbar and working towards the TV mount. Tighten the screws holding the TV mount.

10) Mount and level the TV and soundbar according to the TV mount instructions. Visually inspect the alignment of the TV and soundbar, and make any adjustments as needed. Check for tightness of all hardware.

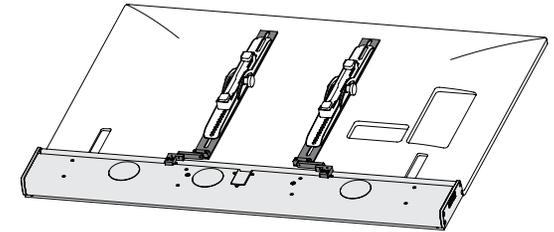


ADJUSTMENTS:

1) If in/out needs adjusting, loosen setscrews at both ends of block "B", make adjustments and retighten.

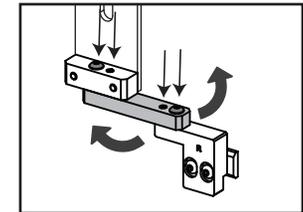

2) If side/side needs adjusting, loosen slotted screws on both "C" blocks, taking care not to let either end of the soundbar rise or lower before retightening.

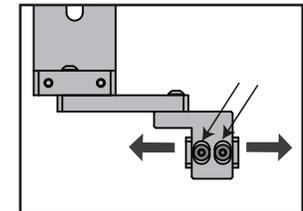

3) If up/down needs adjusting, reposition slotted screws on block "C".

